


## 2 面板介绍

### 2.1 S5560S-SI系列


#### 2.1.1 S5560S-28P-SI 交换机

图2-1 S5560S-28P-SI 前面板示意图

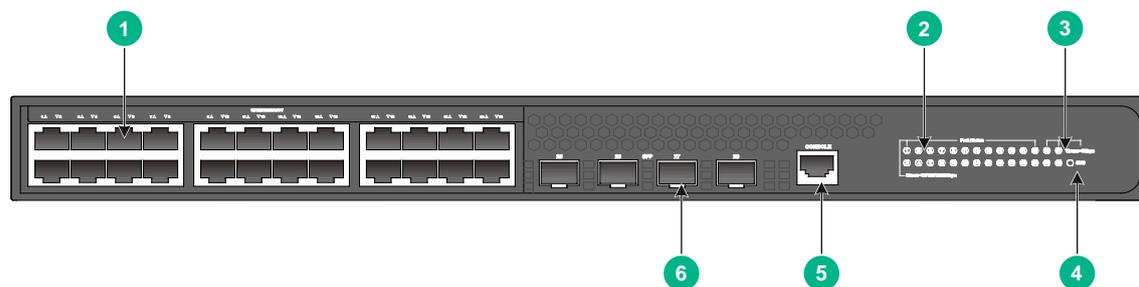

(1): 10/100/1000BASE-T自适应以太网端口	(2): 10/100/1000BASE-T自适应以太网端口状态指示灯
(3): SFP口状态指示灯	(4): 系统状态指示灯 (SYS)
(5): CONSOLE口	(6): SFP口


图2-2 S5560S-28P-SI 后面板示意图

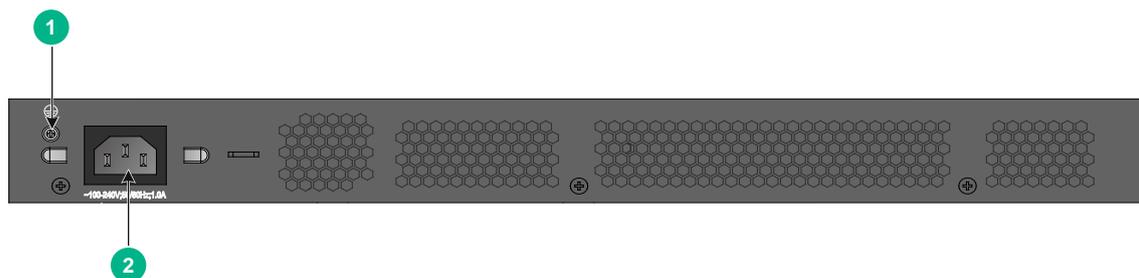

(1): 接地螺钉	(2): 交流电源接口
-----------	-------------

#### 2.1.2 S5560S-52P-SI 交换机


图2-3 S5560S-52P-SI 前面板示意图

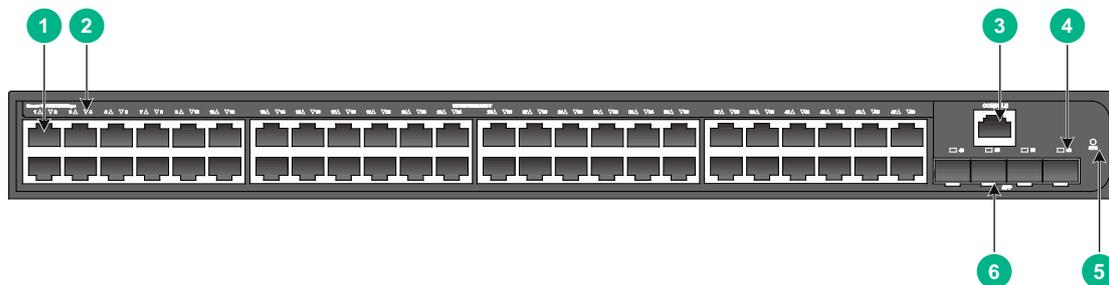

(1): 10/100/1000BASE-T自适应以太网端口	(2): 10/100/1000BASE-T自适应以太网端口状态指示灯
--------------------------------	-------------------------------------

(3): CONSOLE口	(4): SFP口状态指示灯
(5): 系统状态指示灯 (SYS)	(6): SFP口


图2-4 S5560S-52P-SI 后面板示意图

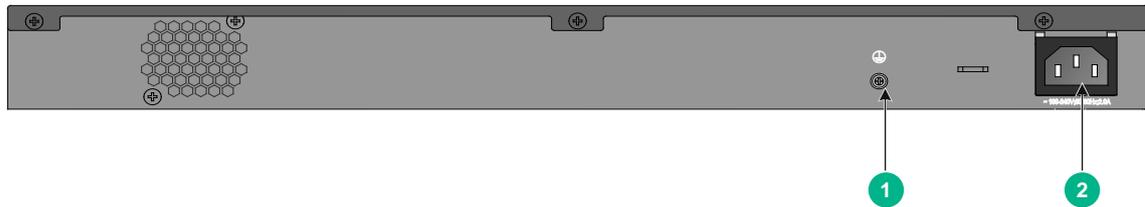

(1): 接地螺钉	(2): 交流电源接口
-----------	-------------


### 2.1.3 S5560S-28S-SI 交换机

图2-5 S5560S-28S-SI 前面板示意图

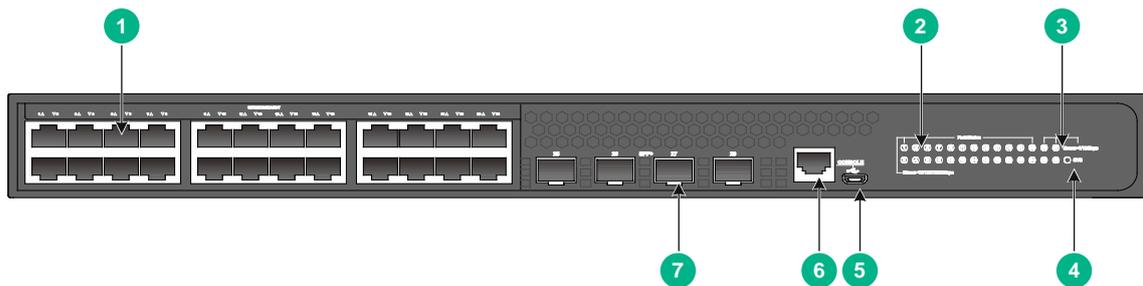

(1): 10/100/1000BASE-T自适应以太网端口	(2): 10/100/1000BASE-T自适应以太网端口状态指示灯
(3): SFP+口状态指示灯	(4): 系统状态指示灯 (SYS)
(5): Micro USB CONSOLE口	(6): CONSOLE口
(7): SFP+口	

图2-6 S5560S-28S-SI 后面板示意图

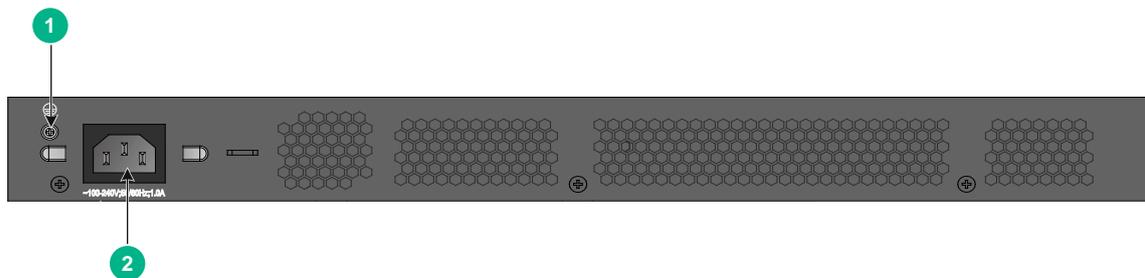

(1): 接地螺钉	(2): 交流电源接口
-----------	-------------