



输出轴选择


S1(外螺纹)

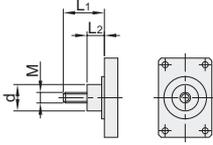


S2(内螺纹)

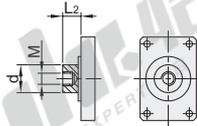

S4(前鱼眼轴承)

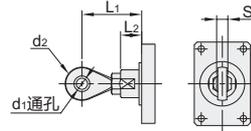

S6(带导向轴)

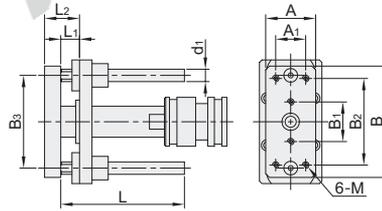

视角标准：第一视角


尺寸表

缸径	S2(内螺纹)			S4(前鱼眼轴承)						S6(带导向轴)									
	d	M	L2	d1	d2	L1	L2	S	L	L1	L2	d1	A	A1	B	B1	B2	B3	M
40	16	M8	20	8	24	36	15	12	行程+50	10	20	8	35	23	70	20	49	59	M4
50	25	M12×1.5		10	28	43		14	行程+100	15	28	10	40	24	90	32	70	75	M5
60	35	M20×1.5		20	50	78		25		行程+150	30	45	16	51	40	130	50	90	102
75	40		30	42									65		149	45		115	
80	50	M30×2.0		25	60	86.5		31			50	20	74	45	178	69	129	129	M8
94	60				90.5						90	25	78	50	174	70	130	148	M10


安装方式选择

侧面螺纹孔示意图

R7(前后法兰卧式)

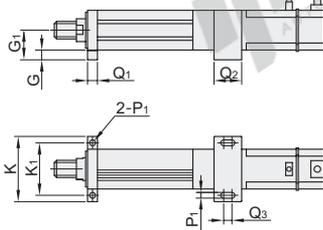

C(有侧面螺纹孔)

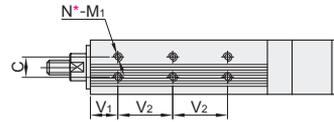

- ① *螺纹孔数量N计算方法
 $N = [(行程 - V_1 - V_2) / V_2 + 1] \times 2$
- ② 满足条件: $(行程 - V_1 - V_2) / V_2$ 计算结果为正数时, 需去尾数取整数; 为负数时, 2个螺纹孔;



视角标准：第一视角

缸径	电机安装方式	R7(前后法兰卧式)						C(有侧面螺纹孔)					
		Q1	Q2	Q3	K	K1	G	G1	P1	V1	V2	C	M1
40	直连	10	48		70	55	10	25	5.5	30	40		
50		10	29		80	65	12	31	6.5	35	45	20	M4
60		20	32	5	101	81	20	35		65		32	M6
75		20	42		115	95	15.5	45	9	70	50	35	M8
80		20	53		120	100		50			48		M8
94		25	75		154	124	20	57	10.5	80	70	52	M10