 
D5














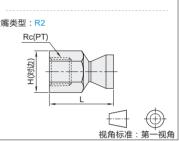

🧿 喷嘴类型	:	H1	/H2	H3
--------	---	----	-----	-----------

	<u>-</u> -у, нд Д -														
型号 喷嘴类型		H1				H2				H3					
	代码	适用管径	顺贿 天空	L	D	D ₁	D ₂	L	D	D ₁	D ₂	L	D	D ₁	D ₂
		2	H1	30.3	15.9	3.90	1.5	30.1	15.9	7.55	3.1	35	15.88	9.93	6.3
	J-XWY71	3	H2	32.3	21.0	10.11	6.3	39.4	21	12.38	9.6	32.80	21	14.44	12.0
		4	Н3	37.3	25	10	6.2	37.5	25	12.30	9.7	37.75	25	16.60	12.6

◎ 喷嘴类型: K1/K2/K3

型	.号	喷嘴类型		K	(1			K	2			K	(3	
代码	适用管径	唢	L	Α	D ₁	D ₂	L	Α	D ₁	D ₂	L	Α	D ₁	D ₂
J-XWY71	2	K1	24.8	19.8	4.1	1.8	25.4	19.8	5.6	3.0	26.6	20.0	9.0	6.1
J-XW1/1	4	K2 K3	35.8	30.0	9.4	6.8	37.3	30.5	12.4	9.5	39.0	30.6	15.3	12.6

○ 赔偿 ※ 円・P1/P2

	☑ 顺嘴尖望	2 . P1/P2											
	型号 喷嘴类型 P1							P2					
ĺ	代码	适用管径	顺贿 天空	L	Α	A1	N	d	L	A	A1	N	d
	J-XWY71	2	P1	45.80	46.8	39.78	16	1.0	45.8	46.9	41	16	1.5
	J-XW171	4	P2	58.85	70.0	65.20	20	1.8			_		


○ 喷嘴类型:S1

■ 火州人コ	• .					
型	号	喷嘴		S	1	
代码	适用管径	类型	L	Α	A1	В
	2		29.5	28.6	25.0	1.7
J-XWY71	3	S1	39.0	34.2	32.1	3.2
	4		50.1	50.1	47.3	4.4

◎ 喷嘴类型:R1/R2

NAM X								
型	号	喷嘴		R1			R2	
代码	适用管径	类型	L	Н	Rc(PT)	L	Н	Rc(PT)
J-XWY71	2	R1 R2	20.8	16.1	Rc1/8	24.9	16.7	Rc1/4



 







○ 组装钳

г				
	代码	类型	材质	表面处理
	J-XWY81	组装钳	铝	本色阳极氢化

① 使用专用的曲管组装钳即可简单的拆装曲管。









	型号
代码	适用管径
	2
J-XWY81	3
	1



型	号
代码	适用管径
J-&W)81	3
J-WVV 101	4
J-XWY81	— 3





