


吊环螺钉

带螺母/无螺母


代码	类型	材质		表面处理
		国标	相当	
TBF01	吊环螺钉	Q235	SS400	镀锌
TBF02		0Cr18Ni9	SUS304	—
TBF03	无螺母	Q235	SS400	镀锌
TBF04		0Cr18Ni9	SUS304	—

❶ 禁止使用管钳或敲击扳手。

带螺母
TBF01
TBF02

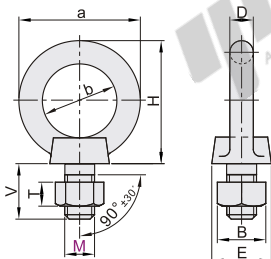

无螺母
TBF03
TBF04

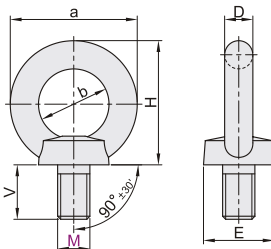

❷ 本产品适用标准: DIN 580-2010



视角标准: 第一视角

型号		载荷(T)	螺距P	a		b		D		E		H		V	螺帽	
代码	M			TBF01/03	TBF02/04	TBF01/03	TBF02/04	TBF01/03	TBF02/04	TBF01/03	TBF02/04	TBF01/03	TBF02/04		B	T
带螺母 TBF01 TBF02	6	0.14	1	36.3	28	19.7	15.7	8.3	6.3	20.3	15.3	37.5	28	13	10	5
	8		1.25		36.3		19.7		9.3		20.3		37.5		13	6.5
	10	0.23	1.5	45.3	45.3	24.7	24.7	10.3	10.3	25.3	25.3	46.5	46.5	17	17	8
无螺母 TBF03 TBF04	12	0.34	1.75	54.3	54.3	29.7	29.7	12.3	12.3	30.3	30.3	55	55	20.5	19	10
	14*	0.49		63	—	35	—	14	—	35	—	62	—		21	14
	16	0.7	2	63.3	63.3	34.7	34.7	12.5	12.5	35.3	35.3	64.5	64.5		27	24
	20	1.2	2.5	72.3	72.3	39.7	39.7	16.3	16.3	40.3	40.3	71	71	30	30	17

❸ 带*规格不适用TBF02/04。



请按图示订货

型号	代码	螺母
TBF01	6	M6
TBF02	8	M8
TBF01	—	M6



未税价(元)

优惠价	数量	1~99	100~
价格	100%	另行报价	



交货期	7
-----	---




Example
使用示例


❹ 安装方式: 安装时, 用手轻轻地紧固吊环螺钉, 使吊环螺钉支承面平整的紧贴在工件平面上。

正确吊装方式

1、直吊

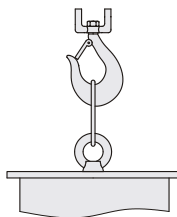


2、45°起吊

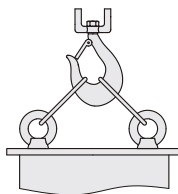

错误吊装方式

1、横向起吊



2、使用一根钢丝绳悬吊两个吊环螺钉

